


Awakening taste

Instructions for use of commercial pearl pot

Business inte



Please read this manual carefully before use, and keep it carefully after reading for future reference. The pictures are for reference only, and the products are subject to the real thing!

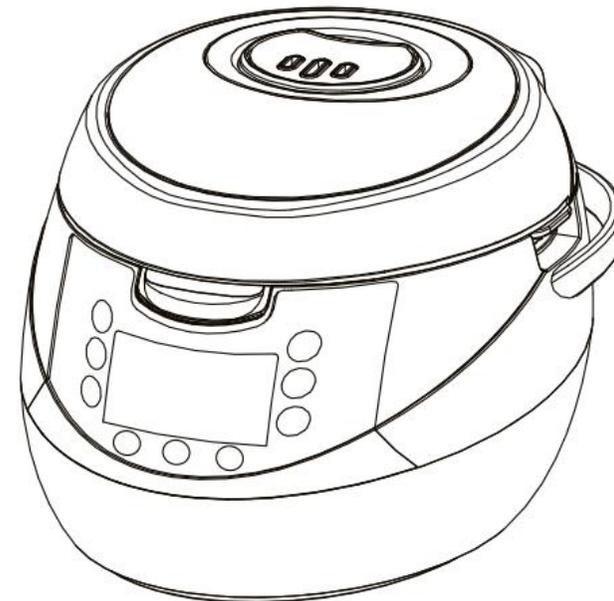

Please read the instruction manual carefully before installation or use.

Preface of instruction

Dear users, thank you for using our products. In order to facilitate your correct operation of this product, please read this manual carefully before using it and store it in a fixed place so that you can refer to it in the future.

Instruction catalogue

One. Matters needing attention ...	2
Two. Tips	· three
Three. Product structure	· four
Four. Instructions for use	· . . 5
Five. Product operating instructions ...	· . . 6
Six. Cleaning and maintenance ...	· seven
Seven. Circuit schematic diagram	· eight
Eight. Common faults and troubleshooting methods	· . . 9
Nine. guarantee card	

guarantee card

attend to guest	(full) name		Warranty period one year
	Land address		
	telephone		
	Date of purchase:		
Please fill in all columns of this warranty card in detail.			
1. This product is free of charge under normal use within one year from the date of purchase.		inspect or	
2. If it is necessary to replace spare parts beyond the time limit specified in the above item, the maintenance fee shall be charged as appropriate.			
3. During the warranty period, it will not be repaired free of charge in the following cases:		Signed by the dealer	
a. Failing to show the warranty card or proof of purchase (invoice or receipt).			
b. Maintenance beyond the warranty period.			
c. Losses caused by disassembly or modification.			
d. Damage caused by wrong/negligent use or improper human use.			
e. Non-ordinary household use (such as long-term use in harsh environment Place) caused by the failure or damage.			
f. The appearance is naturally stained by use.			

Safety precautions

In order to ensure the safety of use and avoid injury and property loss to you or others, you must observe the following safety.

Precautions. Failure to observe safety warnings and misuse may lead to accidents.
This product does not consider the following situations: the use of appliances by unattended children and disabled people

The situation of children playing with appliances

The meaning of icon



Indicates the content of [forbidden]

Indicates the content of [mandatory]



Matters that may cause casualties.

Matters that may cause minor injuries or property losses.

-  Do not use this pot as food that may cause the exhaust hole to be blocked, such as leaf-shaped food (seaweed, cabbage) or ribbon-shaped food (kelp), and fragmented food (such as corn residue), so as not to cause accidents or damage to the pot (pot); Please don't open the upper cover or put your hands or face near the steam port during work, so as not to cause burns;
-  Please use the socket with rated current above 10A alone. If it is combined with other electrical appliances, it will lead to overheating of the socket and fire and other dangers.
-  This product is only for indoor use, and it is forbidden to be used on unstable or poor heat-resistant countertops to avoid fire. Do not bend the power cord forcibly, get close to high temperature, bind it, bear heavy objects, etc. If there is dust in the plug, please carefully clean up to avoid leakage and fire;
-  The plug should be completely inserted into the socket to avoid fire, electric shock and short circuit. Do not use it when the plug is damaged or the socket is wet, so as to avoid fire, electric shock or short circuit;
-  It is forbidden to put wet towels on the cover, otherwise it will cause deformation and discoloration of the body and cover;
-  It is strictly forbidden to modify the product without permission, and no one except professional maintenance technicians may decompose or repair it to avoid fire, electric shock and injury;
-  It is forbidden to put the pot (pot) in a damp place and close to the fire source, and it is forbidden to wash the pot body directly with water;
-  Please do not let children operate and use it alone. Keep it out of the reach of infants to avoid electric shock, burns and other dangerous accidents.
-  During use or just after use, please do not touch the inner pot directly with your hands to avoid high temperature burns;
-  Do not put rice in the inner pot for elutriation, but put it in other containers for cleaning before pouring it into the inner pot of this product to avoid damage to the non-stick coating of the inner pot;
-  After the inner pot is put into the pot body, please gently rotate the inner pot left and right to ensure that the inner pot is in contact with the heating plate;
-  If the power cord is damaged, it must be replaced with a special cord or a special component bought from its manufacturer or maintenance department; Please do not use wet hands to pull and plug the plug to avoid electric shock and injury;
-  Do not move or shake the pot (pot) during work, so as not to affect the cooking effect or burn;
-  Do not insert pins, wires or other items into the vent hole at the bottom of the pot (pot) to avoid electric shock injury;

In order to ensure the safety of use and avoid injury and property loss to you or others, please be sure to observe the following safety precautions. Failure to observe safety warnings and misuse may lead to accidents. This product does not consider the following situations: the use of appliances by unattended children and disabled people

The situation of children playing with appliances

The meaning of icon  Indicates the content of [forbidden]

 Indicates the content of [mandatory]

 Matters that may cause casualties.

 Matters that may cause minor injuries or property losses.

 It is forbidden to heat the inner pot on an open flame, and it is forbidden to immerse the appliance in any liquid.

 Do not continue to use the inner pot when it is deformed. Contact the maintenance and after-sales personnel of our company to buy a new inner pot;

 Before putting the inner pot into the pot body, please confirm whether there are rice grains or vegetable residues adhered to the bottom of the inner pot or the surface of the heating plate. If there are, please clean it before putting it into the inner pot, otherwise it may lead to overheating

 or uncooked cooking. After use, unplug (do not pull) the power cord in time if it is not insulated;

 Non-professionals are not allowed to disassemble it at will, otherwise there is a danger of electric shock injury. If there is any fault, please go to the specified

dimension.
Xiudian maintenance

 Do not keep the temperature for more than 12 hours, so as not to make the food taste bad;


Tips

-  If the product picture is inconsistent with the real thing, please take the real thing as the standard;
-  Before working in the pearl pot, please check whether the inner pot and steam valve are in place to avoid accidents;
-  There is a slight click or hiss during the use of the product, which is the normal sound of the product. Please don't be flustered;
-  Please don't cook the next pot of pearls immediately after cooking. You should wait for more than 15 minutes after canceling, and then cook after the standby body is slightly cold, which is better.
-  Do not boil pearls in hot water. Otherwise, it will affect the temperature judgment of the thermostat and make the pearl boiling effect worse;
-  Please refer to the water level scale of the inner pot to add the proportion of pearl water, and adjust it appropriately according to the personal taste, otherwise it may cause the pearl to be pinched or too rotten;
-  If the product breaks down, please turn off the power first and pull the plug out of the socket. Do not continue to use it or repair it yourself. Please contact our after-sales maintenance personnel. Please clean the steam valve regularly, so as to
-  avoid the odor of pearls; The technical specifications in this manual are subject to
-  change without notice;

Fault diagnosis and maintenance


	Fault phenomenon	Product reason	Exclusion method
one	The electric heating plate is not hot.	1、 The pot (pot) is not connected to the power socket. 2、 Circuit board damage 3、 Circuit board connecting wires is disconnected.	1、 Check whether the switch, the safety wire of the seeding head socket and the power supply lead are complete, and insert the plug in place. 2、 Send it to the designated maintenance department for repair.
	Electric disc heating	The main circuit board is damaged	Send to designated maintenance department
2	point to no Light The electric heating plate is not hot.	1、 Main thermostat failure 2、 Electric heating tube element burned out. 3、 Circuit board connection is partially broken. 4、 Circuit board damage	Send to designated maintenance department
three	Pearls are not ripe or boiled. Pearl time is too long.	1、 Electric heating disk deformation 2、 The inner pot is tilted and suspended at one side.	1. Slight deformation shall be polished with fine sandpaper, and serious deformation shall be sent to the maintenance department for replacement.
		3、 There is a foreign body between the inner pot and the electric heating plate. 4、 Inner pot deformation 5、 The main circuit board is damaged 6、 Abnormal main thermostat	2、 Turn the inner pot gently to make it return to normal. 3、 Clean it with fine sandpaper. 4、 Send it to the designated maintenance department for repair.
four	Can't automatically keep warm or Abnormal heat preservation temperature	1、 The main circuit board is damaged 2、 Abnormal main thermostat	Send to designated maintenance department
five	Boiled pearls overflow in large quantities.	1、 The main circuit board is damaged 2、 The upper cover temperature switch is different. 3、 No choice of high quality pearl 4、 Excessive water or pearls.	Send to designated maintenance department Adjust the amount of water or pearls.
six	Boiled pearl length Time does not boil	1、 The main circuit board is damaged 2、 The upper cover thermostat is abnormal.	Send to designated maintenance department
seven	Boil into burnt pearls or Boiled pearls are too rotten	Time for boiling or stewing pearls mecism	Appropriately shorten the time for boiling pearls or stewing pearls. "
eight	E1 fault code E2 fault code	Bottom sensor open circuit, short circuit Top sensor open circuit, short circuit	Eliminate loose sensor lines or poor contact, and send them to the maintenance department if necessary.

schematic circuit diagram

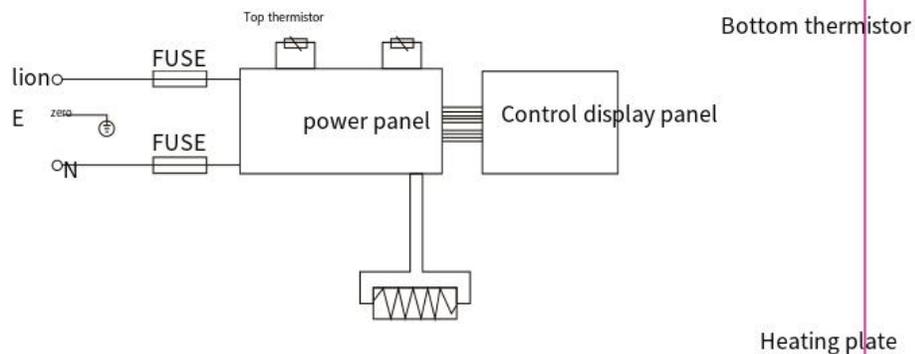

Note: ML-401AC/501AC/401CC/501CC has no thermal insulation tape or sheet.


product mix

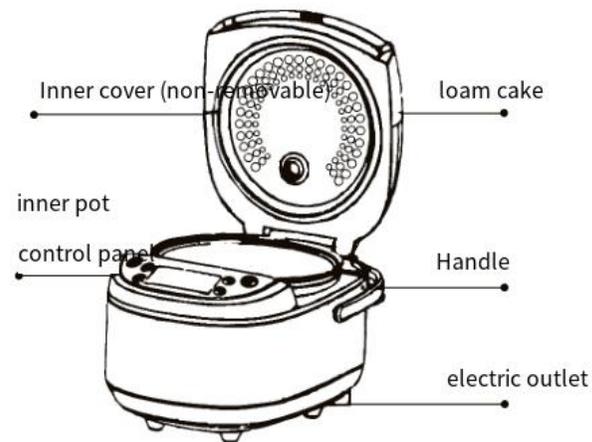

Special statement:

All the contents of this material have been carefully checked, and the company reserves the right to interpret if there are any typographical errors or misunderstandings in the contents; In case of product technology or software upgrade, a new version of the manual will be compiled without prior notice; If the appearance color of the product is changed, the material object shall prevail.

Product panel

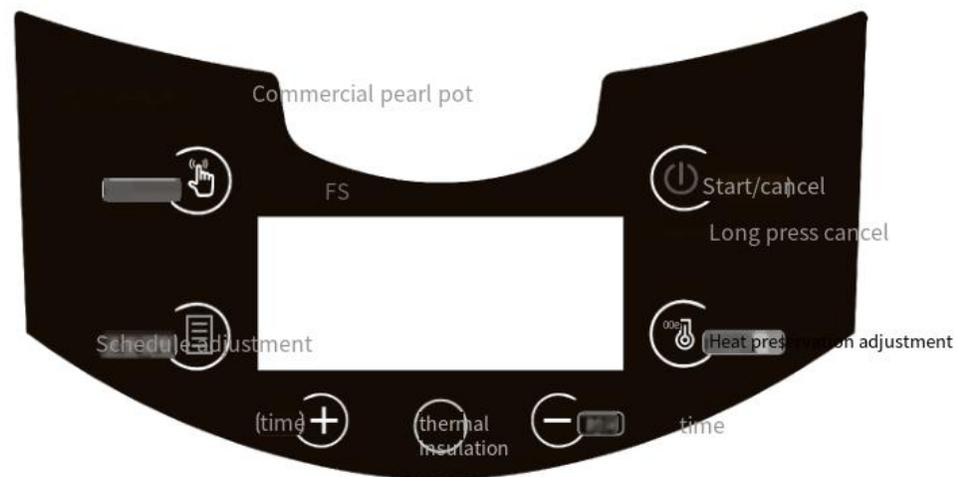

instructions

- 1、 Please read this instruction manual carefully before use, and make sure that the electrical voltage of the socket at home is consistent with this product before plugging in the plug.
- 2、 Before the first use, please take out all the packaged items on the product, and remove the inner pot and steam valve and stick detergent to clean it.
- 3、 After cleaning, carefully dry all parts and put them back correctly.
- 4、 Boiled pearls are added with water according to the ratio of 1: 6 to the corresponding scale.
Note: Please do not add more water than the maximum scale line of the corresponding function, otherwise it will cause overflow.
- 5、 Wipe the water outside the inner pot and put it into the pot body.
After the pearl reminder light flashes, the pearls are evenly spread on the bottom of the inner pot. Then gently rotate the inner pot left and right to make the bottom of the inner pot fully contact with the heating plate.
- 6、 Lower the upper cover slowly, and then press the upper cover until you hear a "click" sound, indicating that the upper cover has been covered.
If the lid is not properly covered, the effect of boiling pearls will be affected.
- 7、 When the power supply is turned on, the machine enters the standby state, press the function key to select the required function, and then press the start key to enter the working state, or press the corresponding function key to directly enter the working state.

function declaration

- 1、 Power-on: when the horn rings, all lights and display screens will be on for one second and then go out.
- 2、 Function: Press the function key after power-on, and you can choose to cook bean jelly, pearl, pudding and sago.
- 3、 Schedule adjustment: after selecting the function of boiling pearls or sago, adjust according to the schedule.
Press the "+" and "-" keys to adjust the time when the pearl is boiled or sago is boiled; Cooking pudding and bean jelly takes 30 minutes, and the whole time cannot be adjusted.

Pearl making method

1、 Materials to be produced

	water	pearl
small amount	1.5L	500g
many	3L	1kg

Different proportions of materials and water will have different effects on the length of cooking or stewing. The system will automatically record the parameters of cooking and stewing time by adjusting the proportions and stewing time according to your own preferences.

- 4、 After startup, when other functions are not working, press the heat preservation key to enter the heat preservation function. The default heat preservation temperature is 70 degrees, which can be from 30 degrees to 35 degrees to 40 degrees until 70 degrees. During the heat preservation work, the fire indicator lights up and the "working" marquee lights up.
- 5、 Pour water into the pot, adjust the function, cooking and stewing time, and then press the start button to progress the boiling process.
- 6、 After the water boils, the indicator light will automatically jump to the function of "adding pearls", and the buzzer will sound long to remind you to add pearls. After adding pearls and stirring them evenly, cover the lid, press the "start key" to start the work, and the key light will light up; At the same time, the fire indicator lights up in running mode, and the "working" marquee lights up to complete the automatic stop work, and the buzzer rings for 5 times, and the work is completed.

Note: After adding pearls and stirring them evenly, don't open the lid during work, which will affect the effect of boiling pearls. Take boiled pearls as an example, and boiled sago is the same.

Cleaning and maintenance

- 1、 Cleaning the upper cover and sealing ring: open the lid, clean the upper cover and sealing ring with a rag and dry it with a dry soft cloth (note: do not pull the sealing ring, as pulling deformation will affect the sealing and micro-pressure effect).
- 2、 Cleaning the micro-pressure valve: remove the micro-pressure valve at the steam port, clean it with clean water, dry it with a soft cloth and install it.
Back to the original position. (Note: the micro-pressure valve should be installed in place, otherwise it will affect the cooking effect).
- 3、 Cleaning the inner pot: Take out the inner pot and clean it with a soft sponge. Dry the water with a dry soft cloth after cleaning.
Note: Do not scrub with steel ball, otherwise it will damage the non-stick coating.
- 4、 Cleaning the electric heating plate: If there are rice grains or other sundries attached to the electric heating plate, the sundries can be ground off with 320# fine sand paper and dried with a dry soft cloth.